


Intramuscular Injection Model of Buttocks

- Weight/About 5kg ● Case size/W41×D47×H30cm
- Accessories/Drain bag, Storage case

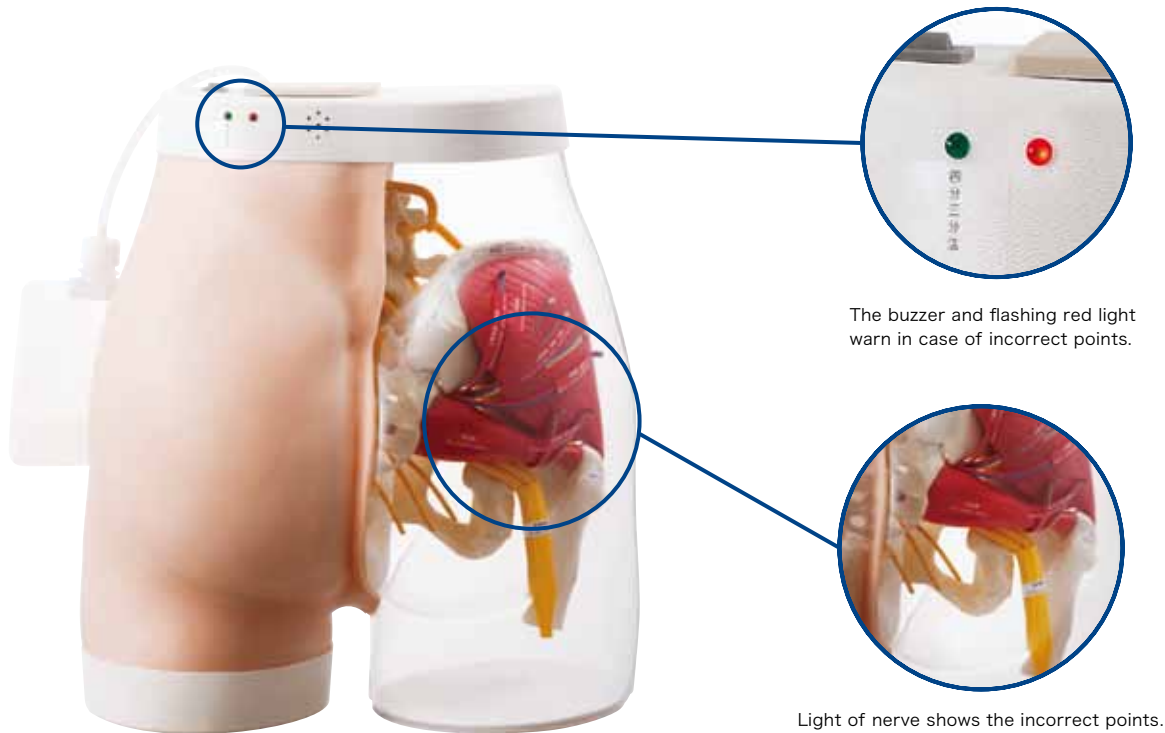

The buzzer and flashing red light warn in case of incorrect points.

Light of nerve shows the incorrect points.

Practice of *Shibusanbu** method

- The pelvis is built-in. Trainees can practice identifying the injection site by palpation of the iliac crest and greater trochanter.
- The green light turns on when a needle is inserted into a safe region. The red light turns on and a warning buzzer sounds when the injection site is incorrect or the insertion is too deep, even at a safe point.
- The water (only tap water) can be infused.

*Upper Outer quadrant of Buttocks

Practice



Injection training to correct injection sites is possible.